

# DRAWING AND PARTS LIST

Item No.	Part No.	Component Part	Description	Qty
1	604006		Filter - Felt (intake)	1
2	608068		Diaphragm	1
3	614037		Air Cap (intake)	1
4	616014		Air Screen ( intake)	1
5	621092		Valve Plate Assembly	1
6		621001	Valve Plate (intake)	1
7		625160	Screw - Flapper	2
8		638210	Flapper Valve (intake)	1
9		625000	Screw - Valve Plate (intake & exhaust)	9
10		625345	Screw - Head & Housing	10
11		625025	Lockwasher - Head & Cap to Housing	10
12		626255	Key (Motor Pulley)	1
13		626256	Filter - Felt	1
14		638162	Safely Valve	1
15		645671	Shaft, Ecc. & Connecting Rod Ass'y.	1
16		607009	Connecting Rod	1
17		625114	Screw - Connecting Rod	1
18		645019	Shaft	1
19		645682	Eccentric & Bearing Ass'y.	1
20		625008	Set Screw - Eccentric	1
21		646070	Bearing & Cap Ass'y.	2
22	660904-504		Housing	1
23	664688-504		Head Assembly	1
24		621009	Valve Plate (exhaust)	1
25		625307	Screw - Flapper	2
26		633029	Gasket - Valve Plate	1
27		633031	Flapper Valve (exhaust)	1
28		661836-504	Head	1

**Field Service Kit - FSKT80 - includes following items:**

**1, 2, 4, 8, 13, 25, 26, 26 and 27**

