

DRAWING AND PARTS LIST

Item No.	Part No.	Component Part	Description	Qty
1	604006		Filter - Felt (intake)	1
2	608068		Diaphragm	1
3	614037		Air Cap (intake)	1
4	616014		Air Screen (intake)	1
5	621092		Valve Plate Assembly	1
6	621001		Valve Plate (intake)	1
7	625160		Screw - Flapper	2
8	638210		Flapper Valve (intake)	1
9	625000		Screw - Valve Plate (intake & exhaust)	9
10	625345		Screw - Head & Housing	10
11	625025		Lockwasher - Head & Cap to Housing	10
12	626255		Key (Motor Pulley)	1
13	626256		Filter - Felt	1
14	638162		Safety Valve	1
15	645671		Shaft, Ecc. & Connecting Rod Ass'y.	1
16	607009		Connecting Rod	1
17	625114		Screw - Connecting Rod	1
18	645019		Shaft	1
19	645682		Eccentric & Bearing Ass'y.	1
20	625008		Set Screw - Eccentric	1
21	646070		Bearing & Cap Ass'y.	2
22	660904-504		Housing	1
23	664688-504		Head Assembly	1
24	621009		Valve Plate (exhaust)	1
25	625307		Screw - Flapper	2
26	633029		Gasket - Valve Plate	1
27	633031		Flapper Valve (exhaust)	1
28	661836-504		Head	1

Field Service Kit - FSKT80 - includes following items:

1, 2, 4, 8, 13, 25, 26 and 27

